WS-031 Fold-over recipe document wallet

Protect paper recipes from incidental splashes while they are stored away from cooking heat.

Controlling dimensions: US inches and feet. Metric equivalents are references. Original editorial design; no physical build, animal trial or load certification is claimed.

Before marking and cutting

US inches; feet where appropriate. Metric values are rounded references. Written inch values control.

3/4 in means measured 0.750 in actual thickness wherever used. Recalculate mating lengths for other sheet thicknesses; do not substitute nominal stock blindly.

Use limits

No waterproof, archival, food-contact, flame or heat rating.

Materials and finished cuts

Part	Qty	Size to cut	Material and detail
A Clear wallet blank	1	20 × 13 in 508 × 330.2 mm	0.020 in clear flexible polypropylene; no heat rating. Cut blank before seams or fitting.
B Closure dots	2	1/2 × 1/2 in 12.7 × 12.7 mm	Paired self-adhesive hook-and-loop dots. Cut blank before seams or fitting.

Hardware and consumables

26 × 1 in transparent document tape. Two 13 in edge lengths; trim excess.

1 × Paired closure dots. One mating pair.

Tools

Rule; Marker; Scissors; Blunt creasing tool

Primary context and design record


Context references; not design endorsements or certifications.

WS-S01 · Hand and Power Tools · OSHA

Assembly and first checks

WS-031 Fold-over recipe document wallet

PLAN / reference origin at front-left; not to scale. Inch values control.

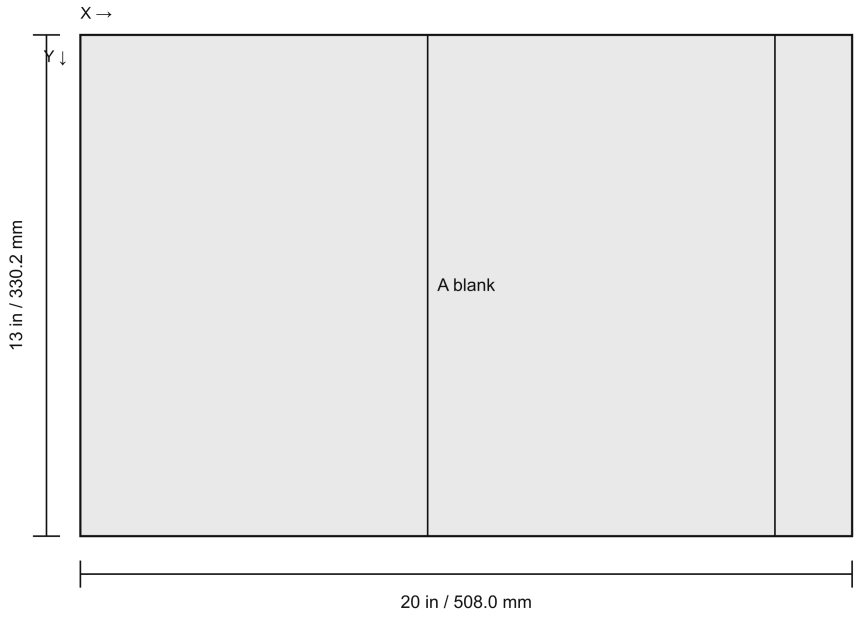

Part letters identify the cut-list pieces. Dashed outline = underside part.
Coordinates in the method use the same X/Y reference.
Do not drill from the graphic: transfer the written center coordinates.
Original editorial design; no physical construction trial or certified load rating.

01 Cut A 20 × 13 in. This fits US Letter sheets without folding the paper, but is not a waterproof document enclosure.

02 Round four corners to 1/4 in radius and smooth the edges; do not heat-form the polymer.

03 With X along the 20 in length, mark fold lines X = 9 and 18 in. The remaining 2 in forms the closure flap.

04 Cold-fold at X = 9 in to bring the first 9 in panel over the central 9 in panel; stop if the chosen plastic cracks or whitens.

05 Use transparent document tape along the two 13 in side edges of the resulting pocket, folding a 1 in-wide tape strip around each edge.

06 Keep the top at X = 18 in open. Press the tape according to its adhesive instructions; no staple enters the pocket.

Complete the assembly

WS-031 Component dimensions

Orthographic component reference. Quantities shown; not a sheet nesting plan or full-size template.



20 × 13 in

A Clear wallet blank QTY 1

20 in / 508.0 mm × 13 in / 330.2 mm cut blank



1/2 × 1/2 in

B Closure dots QTY 2

1/2 in / 12.7 mm × 1/2 in / 12.7 mm cut blank

Measured actual stock controls. Read the written assembly sequence before cutting or fastening.

07 Fold the 2 in flap over the opening. Apply a pair of closure dots at the flap’s midpoint with 1/2 in distance from its free edge.

08 Test the adhesive with an empty pocket before inserting a recipe. Reject any tape that lifts or leaves a sticky internal surface.

09 Slide paper in with 1/4 in minimum clearance from the taped side seams. Close the flap without squeezing air toward wet paper.

10 Place the wallet outside the stove clearance area. Remove the paper before wiping the outside and dry fully before closing.

Acceptance and intermediate checks

Two 9 in panels and one 2 in flap from the 20 in blank.

Side seams continuous; no sharp staple or damaged fold.

Paper slides out dry and freely after an ordinary handling trial.

Cleaning and maintenance

Wipe only when empty.

Replace cracked film or lifting tape.