WS-030 Sealed-pad recipe page weights

Hold a printed recipe open with two removable soft-covered flat pads.

Controlling dimensions: US inches and feet. Metric equivalents are references. Original editorial design; no physical build, animal trial or load certification is claimed.

Before marking and cutting

US inches; feet where appropriate. Metric values are rounded references. Written inch values control.

3/4 in means measured 0.750 in actual thickness wherever used. Recalculate mating lengths for other sheet thicknesses; do not substitute nominal stock blindly.

Use limits

No wind-holding or heavy-book rating; not intended for ovens, hot cookware or direct food contact.

Materials and finished cuts

Part	Qty	Size to cut	Material and detail
A Flat wood pads	2	5 × 1 1/2 × 1/4 in 127 × 38.1 × 6.35 mm	Clear solid hard maple, straight grain along the listed length. Measured actual thickness 1/4 in.
B Washable covers	2	12 × 3 1/2 in 304.8 × 88.9 mm	Prewashed firm washable cotton; measure after drying. Cut blank before seams or fitting.

Hardware and consumables

4 × 1/2 in sew-on hook-and-loop squares. Two paired closures.

1 × Thread. Covers and closures.

Tools

Rule with fractional inches; Pencil or appropriate material marker; Reliable square; Saw suited to the specified stock; Clamps; Abrasive and dust-removal brush; Sewing needle or suitable sewing machine; Scissors; Pins; remove and count after sewing

Primary context and design record


Context references; not design endorsements or certifications.

WS-S01 · Hand and Power Tools · OSHA

Assembly and first checks

WS-030 Sealed-pad recipe page weights

PLAN / reference origin at front-left; not to scale. Inch values control.

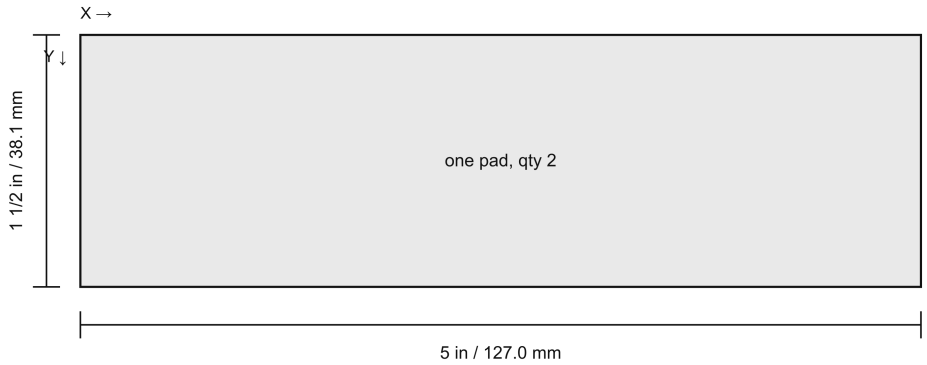

Part letters identify the cut-list pieces. Dashed outline = underside part.
Coordinates in the method use the same X/Y reference.
Do not drill from the graphic: transfer the written center coordinates.
Original editorial design; no physical construction trial or certified load rating.

01 Cut two A pads 5 × 1 1/2 × 1/4 in from flat smooth wood. This design uses no loose grain, lead shot or magnets.

02 Round each wood corner to 1/4 in radius and ease every edge; brush away all dust.

03 Cut two B covers 12 × 3 1/2 in from washable prewashed cotton.

04 Double-turn each short end under 1/4 in and stitch, reducing each cover length to 11 in.

05 Fold each cover across its length with right sides together; the folded packet is 5 1/2 × 3 1/2 in.

06 Sew the two long open edges with a 3/4 in allowance. The internal width is approximately 2 in, providing clearance for a 1 1/2 in-wide pad.

Complete the assembly

WS-030 Component dimensions

Orthographic component reference. Quantities shown; not a sheet nesting plan or full-size template.



5 × 1 1/2 in

A Flat wood pads QTY 2

5 in / 127.0 mm × 1 1/2 in / 38.1 mm

thickness 1/4 in / 6.3 mm



12 × 3 1/2 in

B Washable covers QTY 2

12 in / 304.8 mm × 3 1/2 in / 88.9 mm cut blank

Measured actual stock controls. Read the written assembly sequence before cutting or fastening.

07 Turn the cover right side out and insert one wood pad; keep the open end accessible for removal during washing.

08 Close the open end with two 1/2 in sew-on hook-and-loop squares aligned on the folded fabric lips.

09 Place pads only on blank page margins of a closed-flat work surface; keep them out of pans, food and flame.

10 Open and close the manual beneath them by hand. Remove both wood inserts before laundering the covers.

Acceptance and intermediate checks

Two separate 5 × 1 1/2 in pads, each with rounded edges.

Covers open for insert removal.

Pads rest on page margins without damaging paper.

Cleaning and maintenance

Wipe wood dry; wash covers separately.

Replace roughened pads or torn closures.